

150W FM Transmitter



[Website](#)

[Click here](#)



[Video Show](#)

[Click here](#)



Product Description

Working Voltage	AC100V-AC260V
Working Current	< 1A
Frequency Range	87.5~108MHz
Frequency Stability	±10PPM
Frequency Stepping	100KHz
Environment temperature	-10°C~45°C
Output Impedance	50Ω
RF output power	0W~150W
Harmonic, clutter radiation	≤-60dB
Audio distortion	0.5%
Frequency Response	50Hz~15000Hz
Separation	≥35 dB
Input level	≤15 dBV
Frequency Modulation	±75KHZ
SNR	≥65dB
Size	345mm*480mm*45mm
Weight	6KG





This FM stereo transmitter, using advance modulation system and Phase Lock Loop to control a steady frequency when transmitting.

New invented low noise system is used to reduce the noise level during broadcasting time.

A digital stereo system is used and control the stereo separation at great condition.

With a high gain antenna ,it can easy broadcast anywhere you

want.Home,apartment,church,school,club,camping,backyard,resident village.

This Broadcast Package is plug and Play design, very easy to use , as you could see it at instant. so you really could enjoy the stereo transmitter!

Sales: Cynthia Liu

Email: rsfm1688@163.com

Mob/Whatsapp/Wechat: +86 185 4126 1312

Web: www.rs-radio.com





AUTO MATCHING
108MHz FW:250W RW:005W

1.The frequency can be adjusted by rotating knob left/right from 87.5MHz to 108MHz, the step is 100 KHz.

POWER SET SET:100%
FWD:100% REF:000W

2.The RF power can be set by turning the knob left/right from 0~50/150/500/1000Watts. Step is 0.1W others step is 1W.

F108.0 380 P=108 L:|||||
PWD:100% R:000W R:|||||

3.The volume can be adjusted by rotating left/right to increase/decrease. The volume range is 0-14.

WARNING!
High temperature!

4.Temperature/ SWR protection

NOTE:

Connect antenna first ,then connect the power supply.

otherwise, transmitter will be burned out.

>Select an unused FM station in your area ,adjust any FM Radio to the signal that your are broadcasting on.



Professional FM Transmitter



Company Introduction



ISO 9001:2008
QUALITY CERTIFICATE



Radio Transmitter FCC Certificate



Radio Transmitter
CE&RTTE Certificate



Payment and shipping

Payment



- Standard payment terms: pay30% deposit in advance, 70% balance before shipment.
- Online trade assurance order, all is up to you.
- More payment terms could be provided (T/T, PAYPAL, western UNION)

Shipping

- It take about 3-10 workdays to arrive your address by DHL , TNT, FXDEX.And it take about 25-35 workdays to arrive your address by sea.
- Professional goods shipping forwarder

